


Ordering Code:

Ordering is very simple -
Just define 1. The Meter, 2. The Sensor, 3. The Fitting type

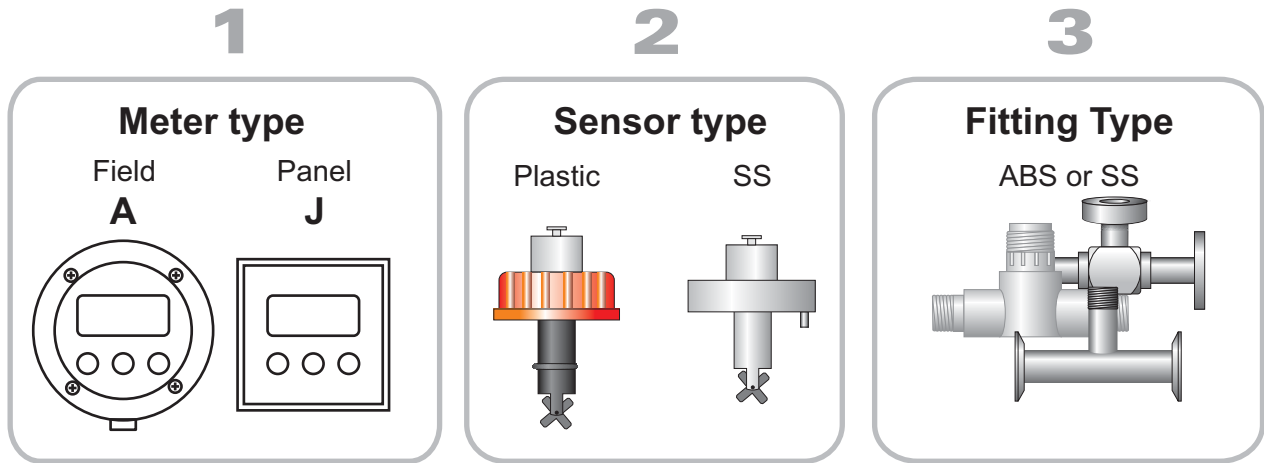

Example: J - 210 / PP - TC - Delryn / 80 - SS - Stub End

Explanation:

